



CONNECT INPUT SIGNALS TO CONTACTS WITHOUT VOLTAGE

SUPPLY VOLTAGE

VAC	VDC	
Phase (L)	+ VDC	1
Neutral (N)	- VDC	2
Earth (PE)	Earth (PE)	3

(See 4.1 Technical features)

OUTPUT SIGNALS

RELAY SUPPLY VOLTAGE ON (K1)
Contact close with voltage On

CUMULATIVE ALARM RELAY (K2)
(See 7.1 Indications in alarms)

INPUT SIGNALS

CONSENT FROM EXTERNAL PRESSURE AIR
Contact close = Pressure air present
LINK CLAMPS IF NOT USED WITH INPUTS FROM EXTERNAL CONTACT ENABLED
(See 2.2 Code D5a)

ON / OFF CLEANING FROM EXTERNAL CONTACT
Contact close = cycle enabled
LINK CLAMPS IF NOT USED WITH INPUTS FROM EXTERNAL CONTACT ENABLED
(See 2.2 Code D6a)

